

Drop-In Frequency Setting Using Older Throttles

T9000 Throttle

Drop-In decoder uses frequencies numbered from 0 to 16 and these are the numbers used when setting the Drop-In to the desired frequency. However, the T9000 throttle uses different numbers for the frequencies, depending on what command is used to set the T9000 transmit frequency.

To use just the Drop-In's first 8 frequencies, 0 thru 7, you may use the same frequency number for both the Drop-In and the T9000 throttle. However, you must use the SEL-1 command to set the desired frequency into the T9000 and you are limited to just the first 8 frequencies.

To use all 17 available frequencies, 0 thru 16, on the Drop-In decoder, you must set the T9000 throttle transmit frequency to the appropriate number from the table below using the SEL-0 command.

RF1300 Throttle

Owners of, or users of an RF1300 throttle, must select from among the first 8 frequencies, 0 to 7, for use with the Drop-In.

When programming CV200, enter the Drop-In frequency that matches the internal switch settings on the RF1300. The right column shows the 8 different settings and the corresponding Drop-In frequency.

Write The Frequency Down - While you may remember the frequency next week; how about in 6 months? Use a sticky label on which to record the frequency. If you use a locomotive address other than the obvious cab number, write it down too. Place the label somewhere on the locomotive where it can be seen. We put our label on the bottom of the fuel tank.

Setting The Frequency - The desired frequency is stored inside the decoder in configuration variable number 200 which is abbreviated CV200. Use SERVICE PROGRAM mode to set the decoder's frequency into CV200.

Frequency Switch Setting - The table shows the RF1300 switch setting for each of the 8 frequencies. Frequency 0 is with all switches (the white actuators) OFF or down.

Drop-In Frequency	T9000 SEL-1 Mode	T9000 SEL-0 Mode	RF1300 Switch Setting
0	0	74	
1	1	68	
2	2	50	
3	3	39	
4	4	27	
5	5	21	
6	6	15	
7	7	3	
8		93	na
9		87	na
10		81	na
11		61	na
12		56	na
13		44	na
14		33	na
15		9	na
16		54	na

© 2014 By CVP Products – All Rights Reserved

P.O. Box 835772 Richardson, TX 75083-577 www.cvpusa.com

June 2014 r2

**With New
Radio Module**

AirWire900®

GP7/9 Drop-In™ Decoder

Installation Guide

USA-Trains GP7/9 Disassembly

Battery And Smart Charger Preparation

GP7/9 Drop-In™ Decoder Installation

Quick Start Guide

How To Use This Manual	2
Drop-In Decoder Familiarization	3
Battery Pack and Battery Charger Preparation	4
USA-Trains GP7/9 Disassembly Instructions.....	6
Installing the Optional Phoenix P8 Speaker and Interface Jack	14
Mounting the P8 Module	15
Mounting the GP7/9 Drop-In Decoder	16
Initial Operation Check Before Reassembly	17
Setting the Frequency.....	18
Quick Start Guide.....	20
Detailed P8 Hookup Diagram and Operating Notes	22
Changing The Decoder Address - Reset To Factory Defaults.....	23
Frequency Setting Using T9000 and RF1300 Throttles	Back

AIRWIRE®
900

Contents
GP7/9 Drop-In Decoder
Battery Pigtail
Charger Pigtail
This Manual

How To Use This Booklet

Locomotive Disassembly and AirWire Drop-in Decoder Installation

This section starts with the simple task of attaching the appropriate sockets and plugs to the battery and the battery charger. Step-by-step instructions then show how to disassemble the USA-Trains GP7/9 diesel locomotive. Once the locomotive is opened up, the installation of the Phoenix P8 sound module is described followed by the rather simple task of installing the Drop-In decoder. With the installation done, a quick checkout is run and then the locomotive is reassembled.

Quick Start Instructions

This short section describes how to control the features of the GP7/9 locomotive using the AirWire throttle. In this section you will find the "cheat sheet" listing the throttle function key assignments for both the locomotive and P8 sound effects.

Miscellaneous Items

Some useful items related to changing the Drop-In decoder address and how to reset the Drop-In decoder to its original factory settings finish out this book.

See The Drop-In Users Guide For Applications Tips

Since this manual is used during installation only, and it is specific to the GP7/9 locomotive, there is a second users guide. This second users guide will have all of the items related to fine tuning and performance optimization as well as some interesting application tips.

Recommended Optional Items - Phoenix P8 Sound Module & Interface Adapter

The Drop-In Decoder is designed to work with the Phoenix P8 sound module. The P8 module requires their interface adapter to setup the P8 functions. If your installation will not have sound, then you may ignore all references to the P8 sound module

Throughout this manual, all references to the battery charger and battery are referring to the CVP Products' 14.8V Lithium battery pack and the Tenergy brand smart battery charger.

This manual applies *only* to GP7/9 Drop-Ins with the new Radio Module. The new Radio Module works differently than an older GP7/9 Drop-In that used a Linx receiver module. This manual has been updated to include new instructions for setting or resetting the radio frequency.

A smart person reads instructions.
A genius follows instructions.

Changing Decoder Address

The original factory setting for the decoder address is 3. You can change the address to any number from 1 to 9999. We recommend using the locomotive cab number. If you don't have a lot of locomotives, perhaps the last digit of the cab number is sufficient. What ever is used, make sure it is unique.

Do not use OPS mode programming to change the decoder address.

T5000 Step-By-Step Key Sequence To Change Locomotive Address - CV1

For this example, the address will be changed from 3 to 9812. First turn on the decoder power switch. Make sure both the throttle and the decoder are on the same frequency. Using the T5000 throttle, enter the following keystrokes to set the new address:

MENU, MENU 4	Sselects service programming
,1,	Enters the CV number to be programmed
9,8,1,2,#	Enters the value of 9812 to be programmed into CV1
*	Exits programming mode

When the final # is pressed, the locomotive decoder is sent the information. The decoder acknowledges this with both a momentary pulse of the motor along with the several beeps. Press * to exit programming mode.

Enter the new loco number into the throttle, # 9,8,1,2,# and verify the motor operates along with the P8 sound system if it is installed.

Resetting Drop-In Decoder To Original Factory Settings

CV8 is very special. When this CV is used, all of your changes to the decoder are erased and the original factory settings are restored.

This reset procedure applies only to the AirWire Drop-In decoder. It does not affect the attached P8 sound module in any way.

Step-by-Step Key Sequence To Reset Decoder Using CV8 Using The T5000 Throttle

Follow these steps to reset your AirWire Decoder to its original factory settings. Remember that any Drop-In decoder sharing the frequency will also be reset. Turn off all other nearby decoders to avoid this problem. Turn on the decoder to be programmed.

- Turn on the T5000 by pushing MENU. Verify it is set to the same frequency as the decoder.
- Push MENU twice and then push 4 to select Service Programming.
- Enter the CV number by pushing, one at a time, the following keys: *, 8, *
- Enter the value by pushing, one at a time, the following keys: #, 1, 3, 5, #.
- Listen for the decoder to beep or chirp signifying the command has been sent.
- Push ESC to exit programming mode.

At this time, the decoder has been reset to factory defaults. It will be on address 3 and frequency 0. Set your throttle to address 3 and frequency 0 to verify reset of the decoder.

The Drop-In decoder sends all sound effect commands to the Phoenix P8 decoder on DCC address 3 regardless of the Drop-In decoder's locomotive address. The P8 sound decoder must always be set to receive commands on DCC address 3.


Phoenix P8 Hookup Diagram



This is the Phoenix P8 hookup diagram. The wires are somewhat stiff and fragile. Don't subject them to a lot of unnecessary flexing.

If not using a P8 speaker, cut off the connector on the two brown speaker wires and solder the wires directly to the speaker.

The sockets are polarized and can only be completely inserted when oriented correctly.

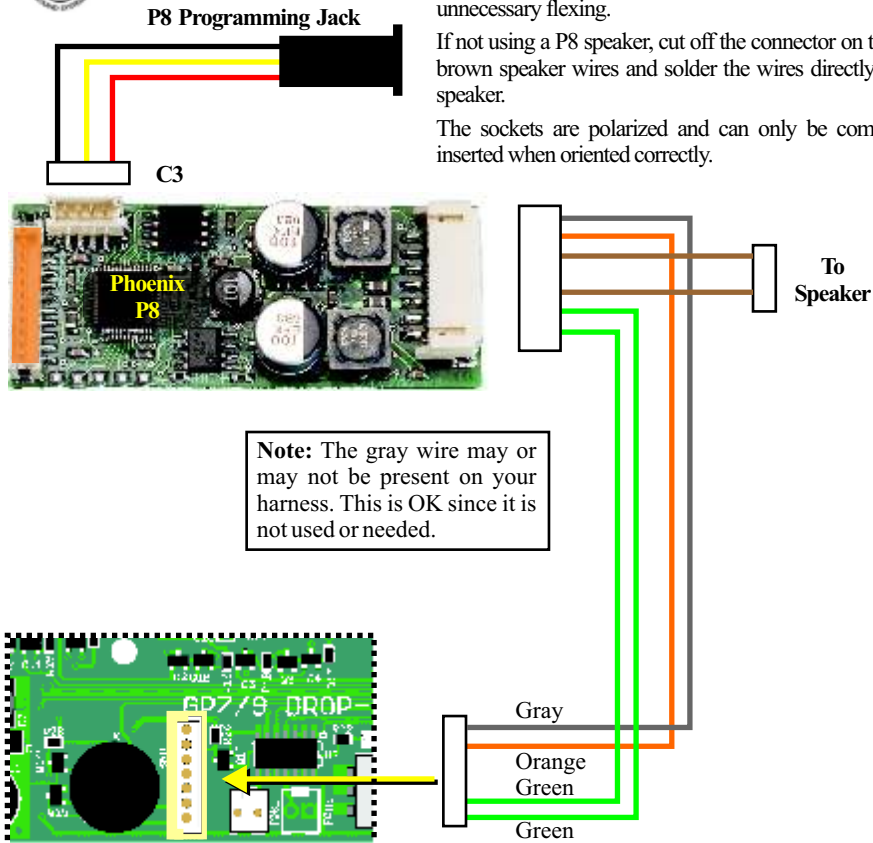

Note: The gray wire may or may not be present on your harness. This is OK since it is not used or needed.

Drop-In "SND" Socket

The Drop-In decoder has a dedicated power switch for the P8. The P8 power switch is independent of the Drop-In decoder power switch. When turned on, the P8 is connected directly to the battery. The P8 can be powered while the Drop-In decoder is not.

Don't forget this fact when you turn the sound volume down low or off. Even if off, the P8 draws power from the battery and it will not automatically turn off.

Always use the power switch to shut off the P8.

P8 Address Setup


The Drop-In decoder sends DCC commands to the P8 on address 3. There is no need to change the P8 address from the factory setting of 3.

Phoenix P8 Sound Decoder Setup - See The Drop-In Decoder Users Guide

The P8 is a versatile sound decoder with many options and selections. However, there are selections that must be made to achieve the best results with the AirWire Drop-In decoder.

Detailed P8 setup instructions are contained in the Drop-In Decoder Users Guide. Also, be sure and see the P8 manual and read the help screens that are part of the Phoenix programming software.

GP7/9 Drop-In Decoder Familiarization

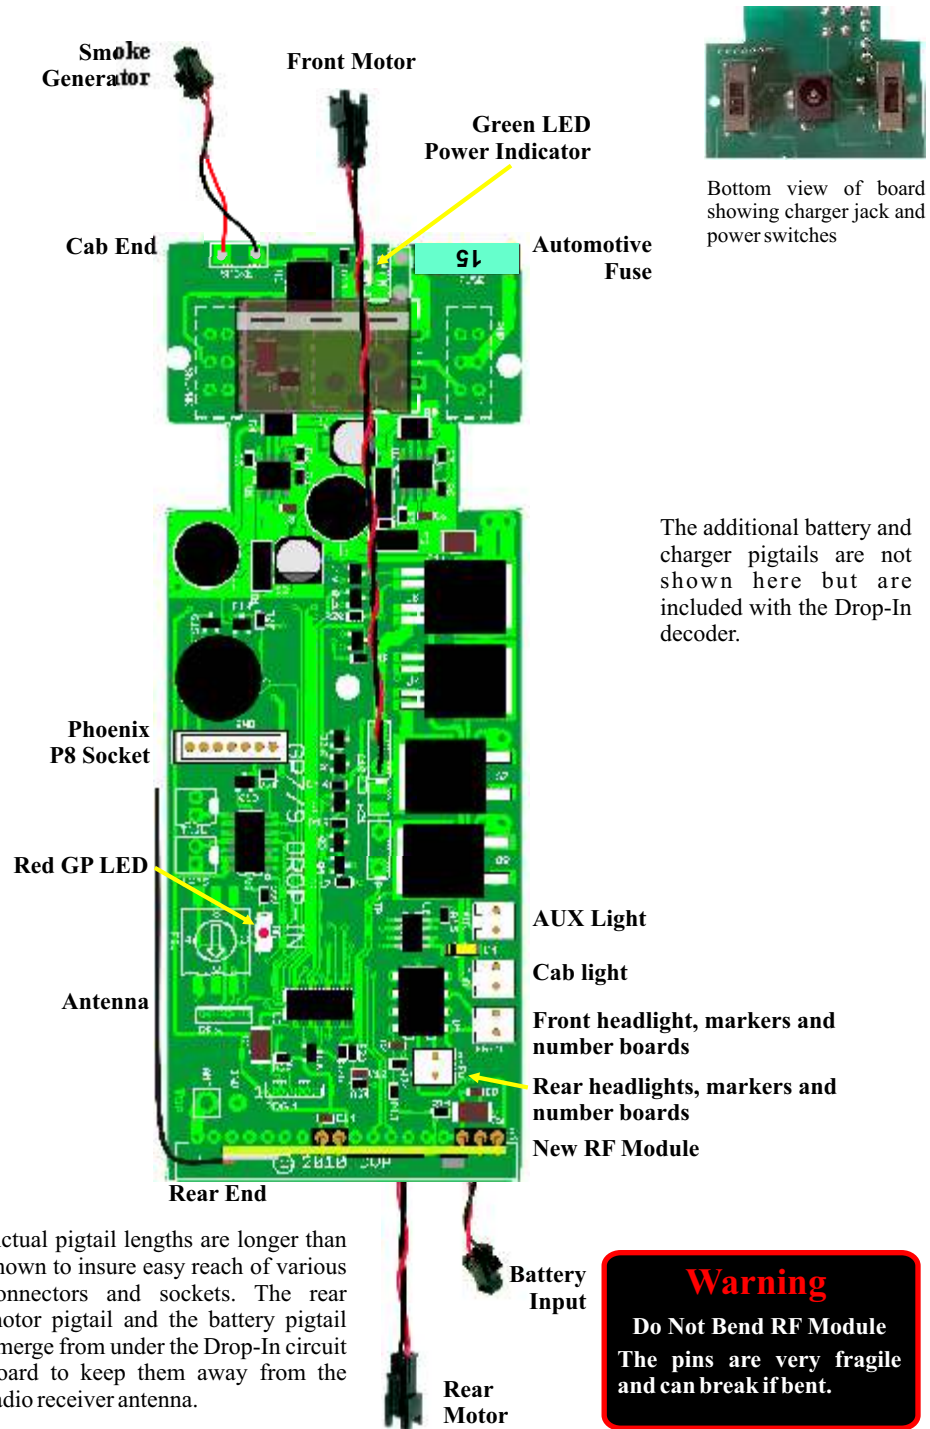

Bottom view of board showing charger jack and power switches

The additional battery and charger pigtails are not shown here but are included with the Drop-In decoder.

Actual pigtail lengths are longer than shown to insure easy reach of various connectors and sockets. The rear motor pigtail and the battery pigtail emerge from under the Drop-In circuit board to keep them away from the radio receiver antenna.

Warning
Do Not Bend RF Module
The pins are very fragile and can break if bent.

Attaching Battery Pack Pigtail



WARNING: The CVP battery pack wire ends are insulated with heatshrink tubing. Remove only one piece of tubing at a time and then, only when ready to make the connection to the power plug, NEVER allow the two bare battery wires to touch.

The Lithium battery pack comes with wires that must be connected to the power plug pigtail. The pigtail is included with each Drop-In decoder. This is not difficult and no special tools are needed.

If you are using a different battery, you must properly identify the PLUS wire. If you get the polarity wrong, you will damage the Drop-In decoder and the warranty does not cover this. If you are not sure, seek help - don't guess.

Battery polarity is very important. Incorrect polarity will damage the decoder. This is not covered by the decoder warranty. For the Lithium battery, the plus wire is red. The black wire is minus. For the power plug, the plus wire is also red and the minus wire is black.

Twist the Power Plug Wires Together so they look like the picture. This helps minimize radiated noise. Once twisted together, trim both power plug wires to about 4 inches long. Next, trim the red power plug wire so it is about 1 inch shorter than the black wire.

Remove about 1/2 inch of the insulation from the black wire. Twist the strands together and touch a tiny bit of solder to the twisted wire. This is called tinning and keeps the twisted wires from unraveling.


Remove about 1/2 inch of the insulation from the red wire. Twist the strands together and touch a tiny bit of solder to the twisted wire. This is called tinning and keeps the twisted wires from unraveling.

On the battery, start by trimming the black wire so it is one inch shorter than the red wire. Do not remove the heatshrink tubing on the red wire.

Remove about 1/2 inch of the insulation from the battery's black wire. Twist and tin the wire.

If you are using heatshrink tubing to insulate the solder joints, now is the time to slide a piece over the black wire - either side will work. Otherwise, use electrical tape to insulate each connection. Overlap or twist together the two black wires and solder them together. Once the solder joint has cooled, slide the heatshrink over the connection and heat it up so it shrinks around the connection. Make sure no bare wires are visible.

Remove the heatshrink tubing from the red wire. Don't forget to slide on a fresh piece of heatshrink for use later. Now overlap or twist together the two plus wires and solder them together. Once the solder joint has cooled, slide the heatshrink over the connection and heat it up to shrink it around the connection. Make sure no bare wires are visible. This completes the wiring.

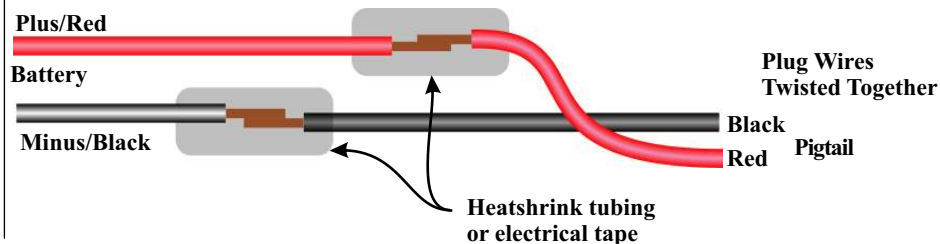

GP7/9 Quick-Start - continued

Coupler clang is triggered by F3. Trigger means the sound effect is transitory and sounds each time the key is pressed.

Grade crossing horn is triggered by F4. This is a 15 second recording of a complete grade crossing horn sequence.

"AllAboard" station announcement is triggered by F5.

Compressor start up is triggered by F6. The sound effects runs for a few seconds and then shuts off.

Volume Up is triggered with F7. To use this feature, push F7 to begin increasing the overall Phonenix sound volume. When the volume reaches the desired level, push F7 to stop and hold the volume setting.

Volume Down is triggered with F8. This works the same as F7 except the volume will begin to decrease when F8 is pushed. Push F8 again to stop and hold the volume setting.

Caution: if the volume is allowed to decrease to 0 or off, the volume will remain at 0 when the power is turned off. When turned back on, you may think there is a problem with the sound when in fact you simply have to push F7 to raise the volume.

Dynamic Brake is toggled with F9.

Brake release sound is triggered with F10.

Air Pop Valve sound effect is triggered with F11.

Diesel Engine Shutdown is triggered with F12. This will initiate the shut down sequence for the diesel engine. You can manually restart the engine by simply pushing F12 again. Note that if the throttle speed setting is not idle, the diesel automatically restart. This applies when the locomotive is standing still too. Any change of the speed control will automatically restart the diesel engine.

This table shows the combined list of recommended function key assignments for the Drop-In decoder and the P8 sound module. Black is the effect for the Drop-In decoder and red is the effect for the P8.

Throttle Key	Loco Effect – Sound Effect
0	Toggle Headlights On/Off and Auto-Dim at Idle
1	Toggle Bell On/Off
2	Manual Horn Activation
3	Trigger Coupler Clank Sound
4	Trigger Grade Crossing Horn effect
5	Enable Cruise Control [change speed to disable]
	Trigger Station Announcement
6	Trigger Compressor Sound Effect
7	Volume Up (push to begin increasing, push to stop)
8	Volume Down (push to begin decreasing, push to stop)
9	Toggle Dynamic Brake Sound Effect
*0	Toggle Smoke Generator [2 minute max time on]
	Trigger Brake Release Sound
*1	Toggle Cab Interior and Number Board Lights On/Off
	Trigger Air Pop valve
*2	Toggle Engine Shutdown or Startup Sound Effect

GP7/9 Drop-In Decoder Operation Quick-Start

Locomotive Motion Control

Now that the locomotive is reassembled, its time to begin exploring some of its new features and capabilities. These two pages show all of the features using the original factory settings.

As you become familiar with your locomotive performance, you will undoubtedly want to make changes as well as fine tune its operation. Detailed instructions for fine tuning are contained in the accompanying Drop-In User Guide. For now, lets concentrate on basic operation.

Speed and direction are controlled from the throttle. Use the throttle's knob to change speed. To change direction, push the direction key. "Forward" direction is defined as if you were sitting in the locomotive cab.

Cruise control activation is easy. Once the locomotive is running at the desired speed, push F5 to activate cruise control. A beep will be heard when cruise control is activated. To deactivate cruise control simply change the speed or direction. A beep will be heard when cruise control is deactivated. At very slow speeds, you may hear a double beep. This means that the locomotive is going too slow for reliable cruise control so you need to increase the speed slightly and push F5 again.

Locomotive Lighting and Smoke Generator Control

Headlights, number boards and marker lights are toggled on and off with the throttle's 0 key. This is function 0 which we shorten to F0 The headlights automatically switch between front and rear when direction key is pushed.

The Cab interior light is toggled on and off with F11. As a reminder F11 is the * key followed by the 1 key on the T9000 throttle. For the RF1300 throttle, F11 requires you to push the # key, then the * key followed by the 1 key.

Smoke generator is toggled on and off with F10. Once turned on, the smoke generator has an automatic 2 minute timeout. However, if the smoke fluid has run out, the locomotive's own smoke generator controller will turn off even if the 2 minute timer has not run out.

Phoenix P8 Sound Effects Control

The table on the next page assumes you have used the recommended configuration file or have set up the P8 to match our recommended settings (see page 21). If you have not yet configured the P8, the sound effects and throttle activation keys will not match and the sound may shut off after only a few minutes of operation. This is normal if the configuration has not been changed - it is not a Drop-In or sound module problem.

Bell is toggled on and off by F1. Toggle means push and release the F1 key to turn on the bell. To turn off the bell, push F1 again.


Horn is activated by F2. This is a momentary activation which means push to turn on and release to turn off. There is an automatic timer tied to the horn activation. Sometimes, when the horn is activated, it does not receive the turn off command. This can be caused by motor noise, distance from the throttle or momentary jamming. To prevent the horn from being stuck on, the Drop-In decoder will automatically shut off the horn.

continued on the next page

Don't forget to reattach the exterior details such as the horn assembly.

Attaching Charger Plug Pigtail To Charger

First, open up the charger box. The only items kept are the charger, the power cord, and the spare fuses. All other items are not needed and may be discarded.

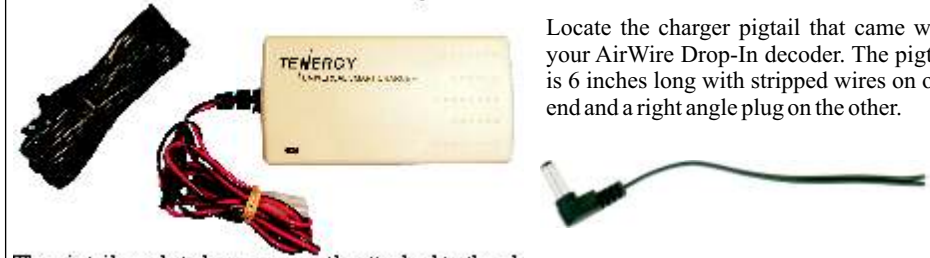

Locate the charger pigtail that came with your AirWire Drop-In decoder. The pigtail is 6 inches long with stripped wires on one end and a right angle plug on the other.

The pigtail needs to be permanently attached to the charger output wires. This is not difficult and no special tools are needed.

Wire polarity is very important and reversing the polarity could damage the charger or the battery or both. On the pigtail, the plus wire is the wire with the white stripe. The minus wire is the solid black wire. The charger uses the conventional red wire for plus and black for the minus wire.


Take the pigtail and separate the 2 wires for about 2 inches. Cut the plus wire so it is 1 inch shorter than the minus wire. Remove about 1/2 inch of the insulation from the minus wire. Twist the strands together and touch a tiny bit of solder to the twisted wire. This is called tinning and keeps the twisted wires from unraveling.

Take the charger wires and split the red and black wires apart for about 3 inches. Cut the minus wire so it is shorter than the plus wire. Remove about 1/2 inch of the insulation from both the black and red ends of the wires. Twist and tin the wires.

If you are using heatshrink tubing to insulate the solder joints, now is the time to slide a piece over the minus wire - either side will work. Otherwise, use electrical tape to insulate each connection. Overlap or twist together the two minus wires and solder them together. Once the solder joint has cooled, slide the heatshrink over the connection and heat it up to shrink the tubing around the connection. Make sure no wire is visible.

Slide a piece of heatshrink over the plus wire. Overlap or twist together the two plus wires and solder them together. Once the solder joint has cooled, slide the heatshrink over the connection and heat it up to shrink the tubing around the connection. Make sure no wire is visible.

Inspect for proper polarity matching and that no bare wire is visible outside the heatshrink tubing. This completes the wiring.

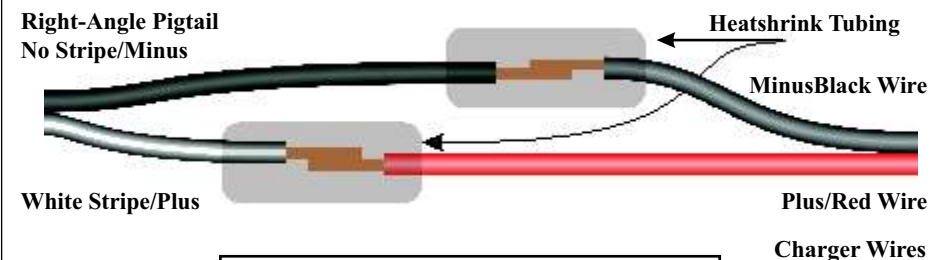

Heatshrink tubing may be ordered from Mouser Electronics. Use 0.25 inch diameter tubing with part number 5174-1141. It sells for about \$2 and comes in a 4 foot length. www.mouser.com

USA-Trains GP7/9 Disassembly

Warning: Many parts of the shell and chassis are fragile and easily break. Especially vulnerable are the steps, doors, side-frame assemblies, and cab awnings. Gently pull up and remove both of the horn assemblies. The cab sun-shades are especially vulnerable. Take care not to break them.



You Must Have The Proper Screwdriver

You must have a thin-shafted, #1 phillips-head screwdriver that is at least 4 inches long to reach the screws. The thin shaft is necessary to fit between the wheel and side frame. This one is from General and has a 4 inch long, narrow shaft with a #1 Philips tip. It is also magnetized which comes in handy for pulling the screws from deep recesses.



A Soft Work Surface Pays Big Dividends

Spread a couple layers of thick towels on your work surface to serve as a cushion for the locomotive. The top of the locomotive is uneven and is unstable when upside down. The towel will help prevent damage should it fall over.

Use a Foam Block To Hold Screws

Take a rectangular sheet of foam and label it B and F to represent the loco's front and back end. As each screw is removed, position it in the foam in about the same location as found on the locomotive.



Total Mounting Screw Count is 18

When all the screws are removed, there will be a total of 18 screws. When you are done, if your count doesn't match, go back and check to see which ones you missed. The next series of illustrations shows the location of the screws and have been numbered for easy reference.

Remove Fuel Tank - 2 Screws

The 2 screws are number below and the red circles are where you will find the screws. Remove the 2 screws, lift off the tank and set it aside for now.



GP7/9 Drop-In Installation

Common Errors and Fixes

Green Power LED doesn't turn on: Make sure the Drop-In decoder power switch is on. The power LED does not turn on even though the sound module is operating OK.

Red GP LED only has a very slow flash rate: This is your indication that either the radio frequency or the locomotive address is set incorrectly. The small frequency selector could also be off by one click. While the power is on, use a small screwdriver to rotate the selector left or right. If the GP light turns on steady, then you have found the correct frequency.

Make sure everything checks - you don't want to have to take the locomotive apart more than once.

Closing Up The Locomotive

This will take a few minutes so don't rush - take your time. Bring the top half down onto the chassis slowly and carefully. Make sure all wires are INSIDE the mounting posts. Don't allow a wire to fall on the outside of the post or you risk pinching it when the top half is mated to the bottom half. Also push the smoke generator wires towards the rear of the locomotive. Keep them away from the antenna. Look on both sides of the locomotive. Make sure you can't see any wires. The antenna is usually the one that escapes.

The top half will seat itself correctly and easily when everything is aligned. It is easy to be off by a small amount which will prevent the two halves from mating. Inspect all around. If resistance is encountered, check for wires that may not be inside the mounting posts. The rear headlight wires are usually the ones that slip outside the mounting posts.

Watch for wires that lie on top of the screw mounting tubes. These are difficult to spot and if missed, the screw will pierce the wire and most likely break it.


Once the two halves are together, turn the locomotive upside down. Once again check for alignment of the two halves. Install the two chassis screws that are hidden by the fuel tank. To start the screw, first turn it slightly counter-clockwise to get it seated in the threads, then turn it clockwise to tighten. Do not over tighten. Finish the reassembly by installing the remaining screws. Don't forget to reattach the roof details.

Here's a hint - leave out the screws hidden by the front truck - they aren't really needed.

If You Accidentally Break A Wire

If you accidentally break the wire, splice it back together, solder the joint and then cover it with tape or heat-shrink tubing. Never leave wires uninsulated. You risk damaging the decoder and locomotive.

Be very careful with the antenna. If it is cut by a mounting screw, you'll get poor reception and it will have to be replaced.

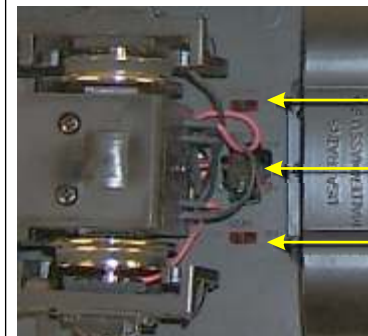

Power Switches And Charger Jack

Drop-In Power Switch [shown ON]

Battery Charger Jack

Phoenix P8 Module Power Switch [shown ON]

Slide Switch Actuator
Towards Truck = ON

Slide Switch Actuator
Towards Fuel Tank = OFF



Quick Start - Setting Address and Frequency

Your Drop-In decoder features an all new and much improved method for setting its radio frequency. Unlike the older style Drop-In decoder, there isn't a tiny rotary frequency selector switch. In its place is a new RF module that uses your throttle to set the frequency. With this new module, you may change the frequency at any time and without opening up the locomotive.

The "Quick Start" section assumes you have already installed your Drop-In. As delivered from the factory, the Drop-In's frequency is set for 0 and the locomotive address is 3. The steps below are for the T5000 throttle. If you have a different throttle, refer to your throttle's user guide.

Note, the LEDs may not be visible in your locomotive. If so, just ignore the comments but do follow the instructions in sequence.

Step 1: Turn Power on to the Drop-In and Turn on Throttle

- The Drop-In's power green LED and the RF module's green LED will glow brightly indicating power is connected.
- If you have not done so, set the throttle to frequency 0. Assuming your Drop-In still has the factory default address setting, also set the throttle's locomotive address to 3.
- When the throttle is turned on to the proper frequency, the RF module's red GP LED will be on. When the throttle is set to the proper locomotive address, the Drop-In's red LED will also be on. If the neither red LED is on, then your throttle is not on the proper frequency or is set to the wrong address. Do not proceed to step 2 until both red LEDs and both green LEDs are on.

Step 2: Set the Drop-In Decoder Address

- Select SERVICE PROGRAM mode. Press the green menu key twice and then push the number 4.
- Now push 1 and push ENT which selects CV1 for changing the address.
- Enter the decoder address that you want to use. The address must be unique. The loco's cab number is always a good idea. Once you have entered the numbers, push ENT. [Address 0 is not allowed].

Step 3: Set the Throttle To The New Address And Verify That The Loco Runs

Step 4: Changing The Drop-In Frequency

- Select SERVICE PROGRAM mode on the throttle.
- Enter 200 followed by ENT. CV200 is where the desired frequency (from 0 to 16) is stored in the Drop-In decoder. *Note: CV200 is used to avoid conflicts with other CV's used in the Drop-In.*
- Enter the desired frequency number and push ENT. Your Drop-In is now on the new frequency. If you can see the small radio module's red LED, it will now be off because your throttle is still on the old frequency.
- Push ESC to cancel SERVICE PROGRAM mode.
- Be sure to enter the new frequency on your throttle.

Quick-Start - Resetting The Drop-In Frequency

There may come a time when your locomotive no longer responds to what you believe is the correct frequency, or you can not remember the correct frequency. Here's how to reset the frequency

Step 1 Turn off all AirWire throttles. This is very important since it is the of the absence of a throttle signal, plus a decoder power-cycle (turning the decoder's power off and then back) that allows the decoder to temporarily jump to frequency 0 where you can set a new frequency.

Step 2 Turn off the Drop-In decoder if it was powered on.

Step 3 Turn on the Drop-In decoder and wait at least one minute. Do not turn on any throttles during this time. After one minute, the Drop-In will be temporarily on frequency 0.

Step 4 Turn on your throttle, and set it to frequency 0.

Step 5 - Use SERVICE PROGRAM to set CV200 to the desired frequency. The locomotive address does not matter when using SERVICE PROGRAM mode. Be sure and make a note of the new frequency. When done, power-cycle the decoder to accept the new frequency.

USA-Trains GP7/9 Disassembly


Front End and Cab Mounting Screws - 8 Screws

Except for number 9 and number 10, the screws are visible without removing the truck. Rotate the truck to expose the screw heads and/or the hollow tubes. The screws located in the deep hollow tubes will require the long, thin-shafted screw driver. As each screw is removed, place it into the foam block.

Once the first 6 screws are removed, the truck side frames will be temporarily removed to gain access to screws number 9 and number 10.

The front truck is easily rotated to expose the hollow tubes. Take care not to damage the truck wiring. Be careful and do not damage the side frame's delicate detail.

If the screw does not come out of the hole, give it several more turns to insure it has released from the


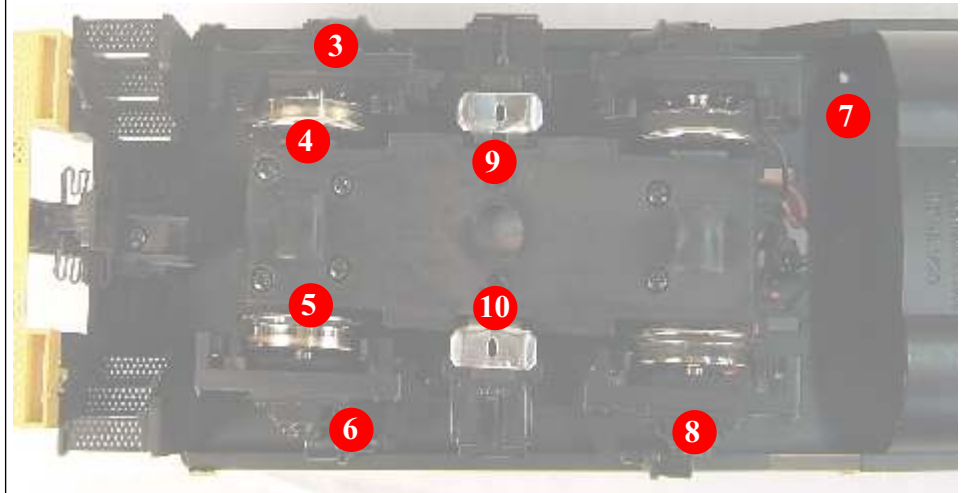


Temporarily Remove Front Truck Side Frames

Three small screws hold the side frame to the truck mounting bracket. Remove the screws and allow the side frame to fall away from the truck. The pickup wire will make sure it doesn't wander off. Remove both side frames. These are not counted in the total screw count.

The motor assembly is now free to be rotated away from the mounting bracket. The two holes are now visible by rotating the bracket. Remove the final two screws from their hollow tubes.


Reassemble the side frames once the chassis screws are removed.

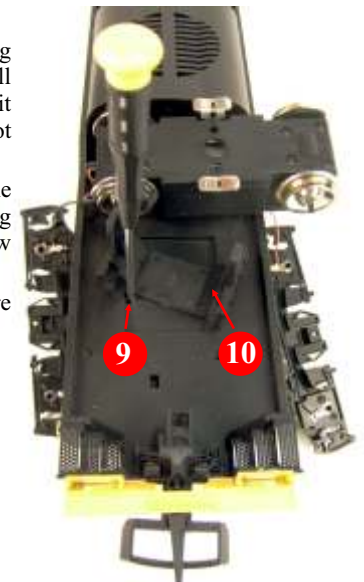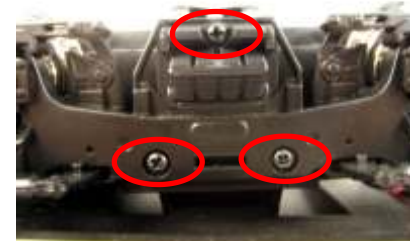

USA-Trains GP7/9 Disassembly


Middle Mounting Screws - 4 Screws

Use the long shafted driver to remove these screws, number 11 through number 14.

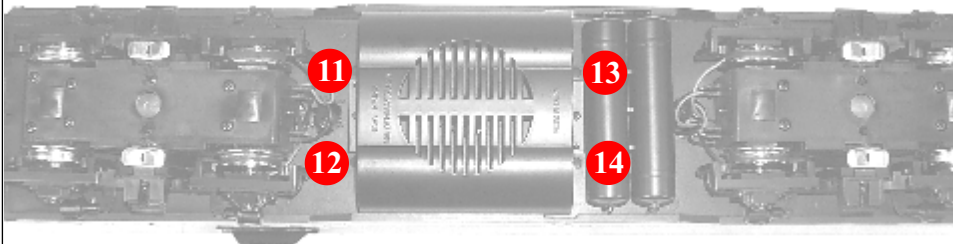

Rear Mounting Screws - 4 Screws

The last 4 screws are easy to see but are near the frame of the truck that obstructs their holes. It is the long shaft screwdriver that does the trick. Rotate the truck to expose the holes and remove the last four screws.

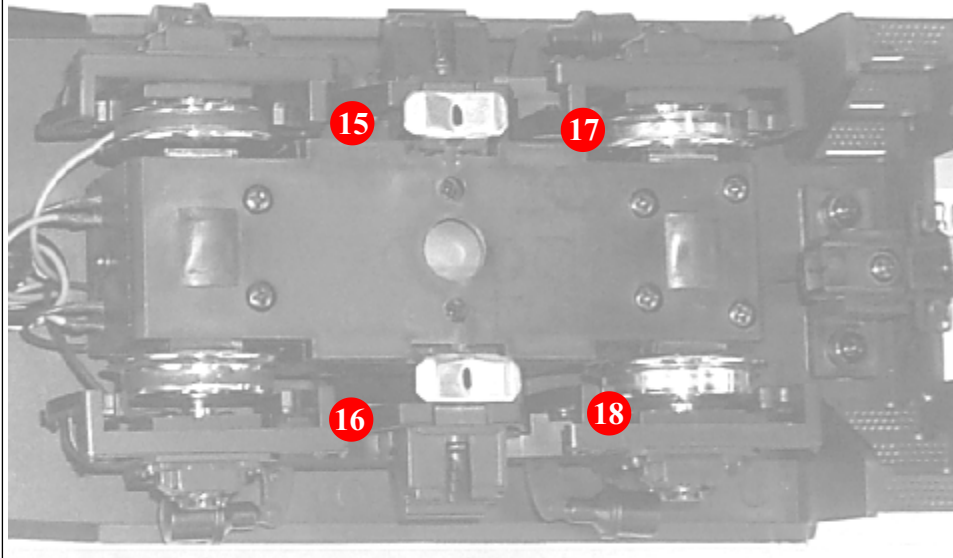

You can remove and discard the track sliders since they are no longer required

GP7/9 Drop-In Installation

Tidy Up The Wiring

Use the left over twist-ties or miniature wire ties (available from hardware stores) to bundle all wires together. Keep all wires away from the antenna as much as possible. Make sure the antenna is pointed vertical relative to the chassis floor.

The next step will be to check the installation and verify correct operation. A throttle will be required for the next set of steps.

Preliminary Checkout


As delivered from the factory, the Drop-In decoder is set to locomotive address 3. Also this Drop-In uses a new type of radio module. It allows you to change the frequency without opening up the locomotive. The factory setting for the frequency is frequency 0. For the examples below, a T5000 throttle will be used.

1. Turn on both power switches on the drop-in. The ON position is when the slide switches towards the truck. The green LED will turn on indicating that battery power is present.
2. You will hear the Phoenix P8 module turn on (if installed). Don't be alarmed if the sound turns off in a minute or so - that is normal and can be changed. Changing this feature will be discussed later.
3. Turn on the throttle and set it for address 3 and frequency 0. See your throttle manual for how to do this. Now look at the red GP LED - it will be on. It may appear to flicker a bit which is normal. This tells you that the address and frequency are set to match the throttle.
4. Slowly turn up the throttle until you see the motor attempt to move. Verify that both motors turn in the same direction.
5. Turn on the front headlight, the number boards and front green marker lights by pushing the 0 key on the throttle. The rear red marker lights will also be on. Change directions and confirm the rear headlight and rear green markers turn on and the front markers turn red. Push 0 to turn off the headlights.
6. Push the * key followed by the 1 key. This will turn on the cab interior light. Push * and 1 again to turn them off.
7. Push the * key followed by the 0 key. Listen carefully for the small fan to start running in the smoke generator. Push * and 0 again to turn it off. Since there is no fluid in the generator, be sure and turn it off.
8. If you have installed the Phoenix sound decoder, push the 2 key and the P8 horn will sound.

Rotate the antenna connector so the antenna wire is vertical for best reception. Keep it away from all hookup wires. This concludes the preliminary checkout.

What About Fine Tuning Or Changing The Frequency?

All motion control settings, options and selections as well as changes to the frequency are made from the throttle. The Phoenix P8 settings are changed via the programming interface jack you mounted in the fuel tank. You can leave the frequency set for 0. Changing the frequency is covered in detail in the user guide. A shortened version is on the next page.

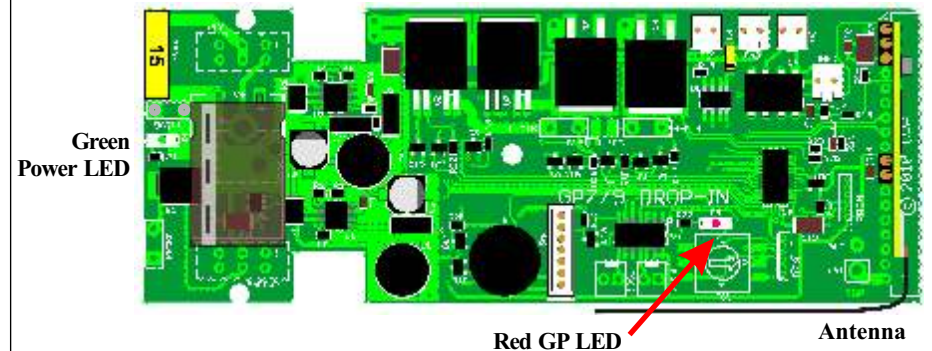

GP7/9 Drop-In Installation

Mount GP7/9 Drop-In

Before mounting the Drop-In decoder, verify that both power switches are off. The actuators will be towards the fuel tank when off. Place the decoder onto the mounting posts. Make sure the jack and switches fit through the holes and the board is flush to the mounting posts. Verify that the front motor connector comes out from under the board and is clear of the mounting posts. Use the 3 screws from the original circuit board to mount the Drop-In.

Plug In P8 Connector

Start with the white connector from the P8 board. It goes into the matching white socket on the GP7/9 Drop-In board. It only goes one way, so don't force it. To keep the wires away from the antenna, place a small piece of foam tape on top of the radio module. Stick the wires to the tape.



Plug In Front Motor, Rear Motor and Battery Pack

Plug in the front and rear motor connectors. The wires exiting out the top of the board are for the front motor connector. The wires exiting out the bottom of the Drop-In board are for the rear motor connector and the battery connection.




Neatness Counts

There will be a wad of wires and connectors near the battery including the unused pickup connector. Tidy up the area using a bit of tape, plastic tie-wraps or with twist ties. Make sure all wires lie between the tall mounting posts.

Shell Lighting Connectors and Smoke Generator


Move the shell near the chassis and orient it so the cab is aligned with the front of the chassis. Plug in the three lamp connectors using the guide below. Slip your finger under the Drop-In board to prevent excess flexing as the connector is inserted. Press the connector firmly into the socket. The smoke generator is connected with the last remaining plug from the Drop-In. The connector is polarized and only fits in one orientation. Make sure it is pushed all the way down onto the pins.

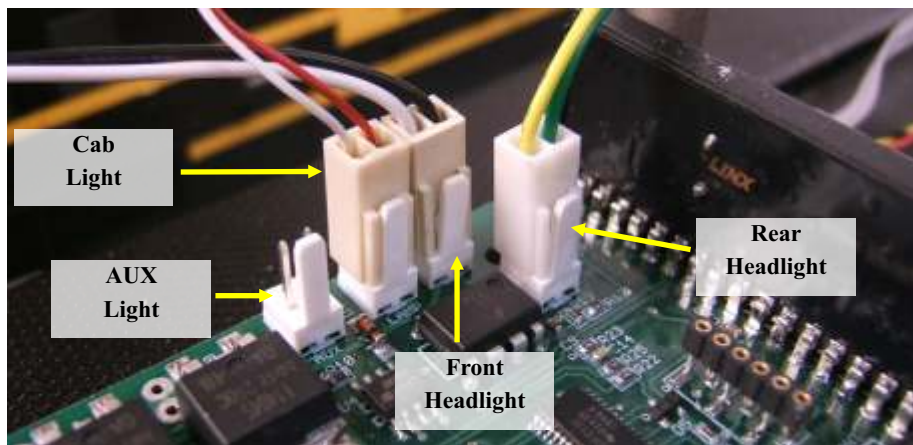

USA-Trains GP7/9 Disassembly

Check Your Screw Count

With all screws now removed, take a moment and compare your count and foam board holder to the one below. Not counting the side frame screws, which you should have already reassembled, the total count is 18. If your count is different, you've missed one. Go back and find the missing screw and remove it. If all screws are not removed, the top shell and bottom chassis can not be separated.

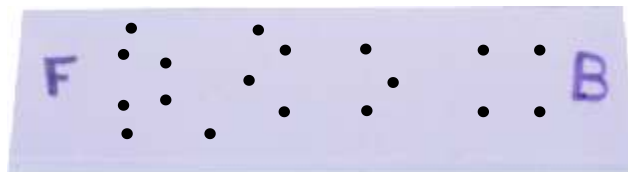

Separating the Top and Bottom Chassis Halves

"Gently" is the key word for this task. Starting at the back end, gently lift the top half of the chassis away from the bottom. If you feel any resistance, go back and verify all screws have been removed. The two halves should come apart easily. Place the top half on its side. Be careful of the small wires that join the two halves.




USA-Trains GP7/9 Disassembly

Unscrew Transistors From Front and Rear Weights

There are two transistor devices, each one mounted to one of the lead weights. They are attached to the original circuit board and which will eventually be discarded. Remove the screws and the washers to separate these devices from the weights. Do not lose the screws and washers from the front weight as they will be used again.

The rear lead weight is shown below. Remove and discard the rear lead weight.

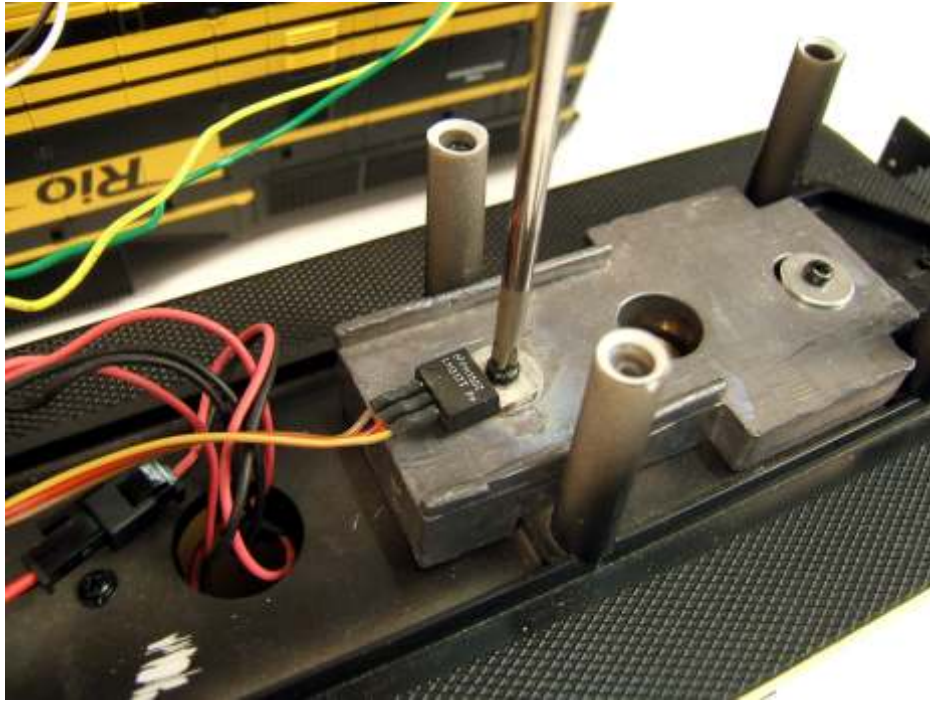

Rear Weight Is Discarded But Keep The Front Weight

The rear lead weight will be discarded to make room for the battery pack. Once the screws are removed, the weight and the mounting screws may be discarded.

Weights Are Made From Lead

The two weight blocks are made from lead. The unused lead weight to be discarded should be done so using an environmentally friendly method. Do not allow children to play with the discarded lead weight.

Fuel Tank And Phoenix P8 Sound Module Mounting

Reattach Fuel Tank

Push the speaker and programming plugs through the hole in the floor above the fuel tank. Reattach the fuel tank to the chassis.


Mount The P8 Sound Module

The P8 is small and is attached to the side of the battery with foam tape. The bottom of the P8 is uneven. Turn over the P8 and place a small piece of double-sided foam tape in the area shown. Then add one more strip across the entire unit. Orient the module as shown with the programming header socket towards the floor.

Plug in the 6-wire P8 Cable to P8 Header and Speaker

This Phoenix supplied cable plugs into the right angle connector on the P8 and connects to the speaker. The other end has two connectors - one for the speaker and one for the Drop-In decoder. Go ahead and plug in the speaker.

The P8 cable is stiff and will not stay put so use a piece of foam tape to hold the P8 wires to the floor.

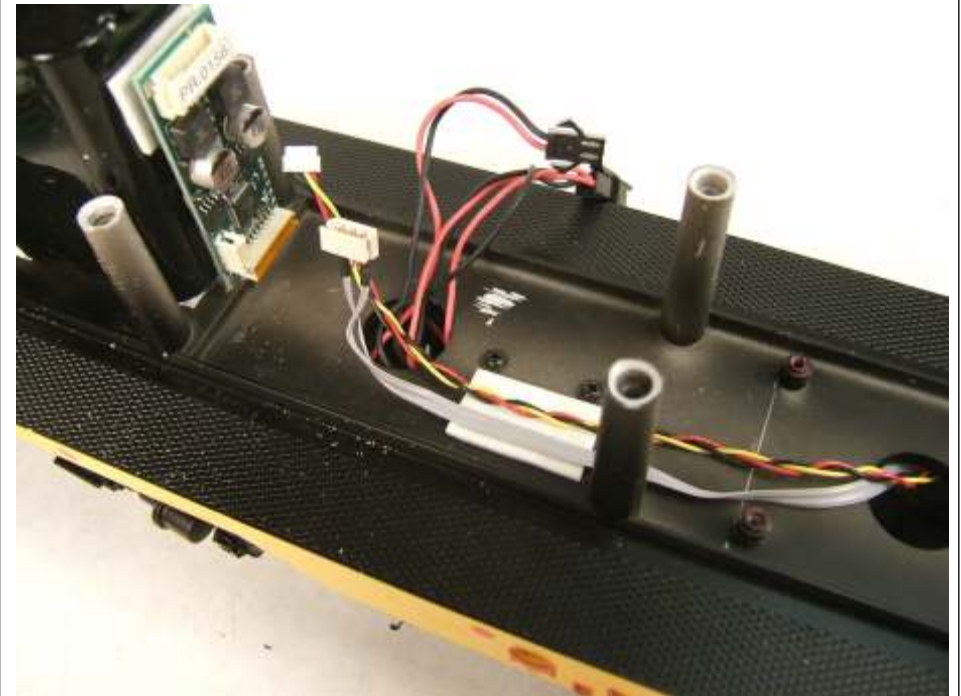

Speaker And P8 Interface Jack Mounting

In the next step, the fuel tank is fitted with a speaker and the Phoenix P8 sound module interface jack. If you are not using a sound decoder, skip the next two pages.

P8 Interface Jack Installation

The Phoenix P8 sound module uses a programming jack to connect it to a PC for editing and downloading of sound files. The programming jack is installed into the fuel tank for easy access. For fast mounting, use quick-set epoxy or hot-melt glue.

The end of the fuel tank facing the front truck is where to drill the hole. Put the hole about half way up the tank and favoring one side. This makes it easier to plug in the P8 programming cable. Drill a 5/16 inch hole for the jack. Remove any burrs from around the hole.

The fuel tank walls are too thick for the jack's threads so remove the nut from the jack and discard. Push the small plug and wire through the fuel tank hole. Use either epoxy or hot-melt glue to permanently mount the jack.



P8 Speaker Mounting

Newer speakers from Phoenix include a two wire plug pre-attached to the speaker. If yours is different, solder the wires to the speaker before mounting it. Hot melt glue is the quickest method to mount the speaker although some people prefer silicone adhesive which takes longer to dry. We like hot-melt glue simply because it is fast.

Center the speaker in the grill opening before gluing.

Place the hot melt glue nozzle into the speaker's corner mounting hole and squirt out a blob of glue. Slowly pull the nozzle from the hole while continuing to dispense glue. This builds up a small glue "post" that holds the speaker securely to the fuel tank. Finally, place a small amount of glue around gaps between the speaker and the mounting area for best sound reproduction.



USA-Trains GP7/9 Disassembly

Unplug All Connectors From Old Circuit Board and Remove The Board

This is relatively easy. Unplug all the connectors from the circuit board. Remove and save the little twist ties. These will be used later.


The lighting connectors are relatively robust and are held in place by friction. Grasp the white plug and pull straight up. Do not pull on the wires. The red and white cab wires are relatively small and easily broken. The other wires are somewhat larger but you need to take care not pull the wire out of the plug.

Unplug the smoke generator from the main board. The connection is made with a large black plug and socket. The motor and pickup connections use the same black plug and socket. Press down on the tab to release it. Don't pull on the wires.

Remove the USA-Trains speaker wires that go down through the hole in the floor. The connector and wires are not needed and may be discarded.

See below for what to do about the smoke controller board on the floor of the chassis.

Finally, remove the 3 screws holding the main circuit board and remove it. The board is no longer needed but be sure and save the screws to mount the Drop-In decoder.

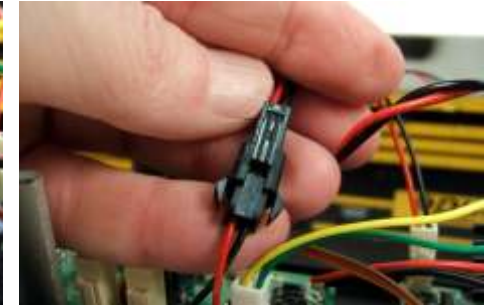

Relocate/Remove The Smoke Generator Board



This locomotive has two smoke generators and two controller circuit boards. One controller board is in the roof and the other is mounted on the chassis floor.

To make room for the sound module, battery and GP7/9 Drop-In decoder, you have a decision to make: get rid of one controller circuit board or mount the extra board in the shell's roof.

The easiest choice is to simply eliminate the controller board mounted on the chassis floor along with its accompanying smoke generator. But if you wish to keep both smoke generators, you need mount the generator board in the roof. We did that to this locomotive.

First remove the smoke generator board from the chassis floor. The two screws are not needed and may be discarded. Next, loosen the left screw holding the smoke unit. Slip the circuit board under the screw and tighten it. Route the wires between the posts and generators to keep them out of the way.

For reference, the smoke generator motor connects to the header labeled "motor" and the other connector goes to the header labeled resistor.

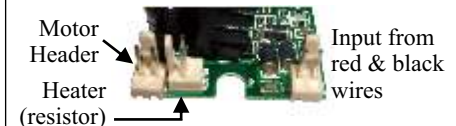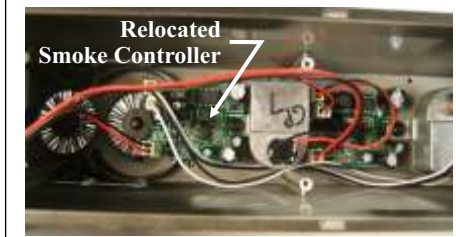

USA-Trains GP7/9 Disassembly



Removing The Front Truck - Optional But Recommended

The front truck and the connecting wires are in the way of the work that needs to be done to enlarge the switch holes. You don't have to remove it. However, it is real easy to nick or break the truck wires so we recommend removing it. It isn't hard.

First remove the weight. You have already removed one screw so there is only one left that holds the weight in place. Go ahead and remove the last screw and remove the weight. Don't lose the screws.

The remaining screw and washer are what hold the truck to the chassis. Remove the screw to free the truck.

Gently pull the truck wire through the chassis hole and set the truck aside.

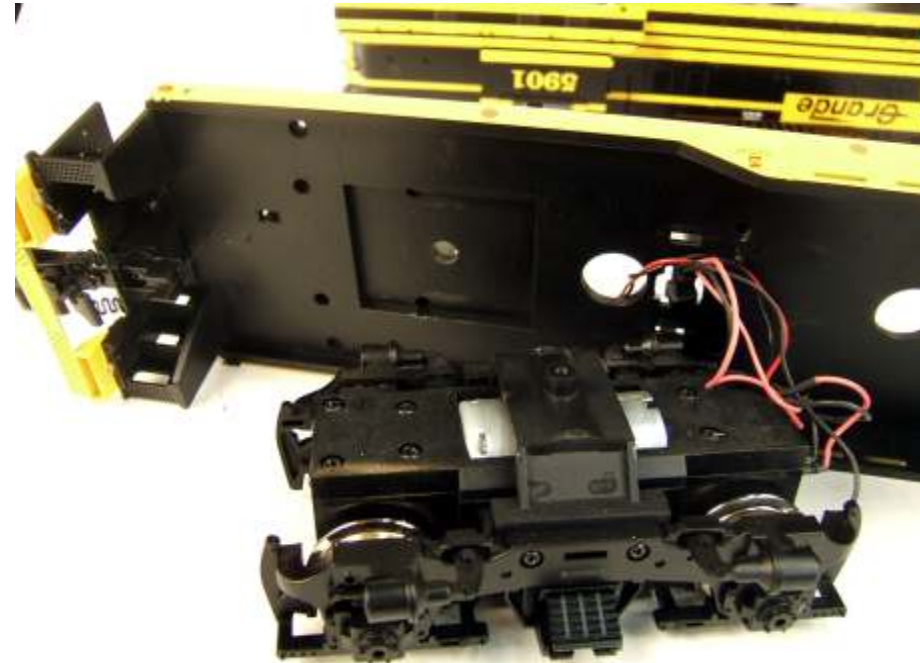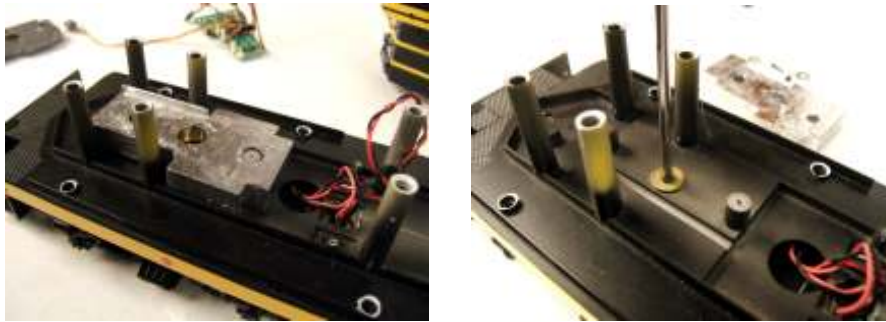

Enlarge Switch Hole And Mount Battery

Enlarge Switch Opening In Chassis Floor

Look at the bottom of the Drop-In board. Note the two switches and jack. The switches fit the outside switch holes in the locomotive floor. However, the area for the charging jack needs to be enlarged.

In the picture to the left, the area to be enlarged is outlined by a white box. Use a hobby knife or motor tool with an abrasive or routing bit to enlarge this area so the jack simply drops through. The jack must not bind. Temporarily mount the Drop-In board when the hole is complete. It must fit flush to the mounting posts (white arrows) and the jack must not bind in the opening. When you get a good fit, remove the Drop-In, clean away the debris and proceed on to the next step.

Reattach Front Truck and Front Weight

With the hole enlarged, you can now reattach the front truck. Feed the wires through the hole in the chassis floor. Do not forget the washer when attaching the truck. Once the truck is mounted, go ahead and reattach the weight.



Battery Mounting

This installation makes use of the standard CVPLithium battery pack. The small size yet high power capacity makes for a simple installation.

The battery replaces the rear weight. The battery is mounted over the rear truck on double stick foam tape.

The two plastic posts that were used to hold the weight must be trimmed flush to the floor. Use a pair of flush-cutting wire cutters or your motor tool. Smooth the area flush to the floor.

The battery is mounted to the floor using double-sided foam tape. Be sure to apply several layers of tape so the battery clears the truck mounting screw. Mount the battery between the posts onto the tape and press down firmly. For added strength, a small dab of hot melt glue can also be used, but keep the glue away from the truck mounting screw.

